


**Befestigungsplatten
montieren**


Mounting the fixing plates

Monter les plaques de fixation

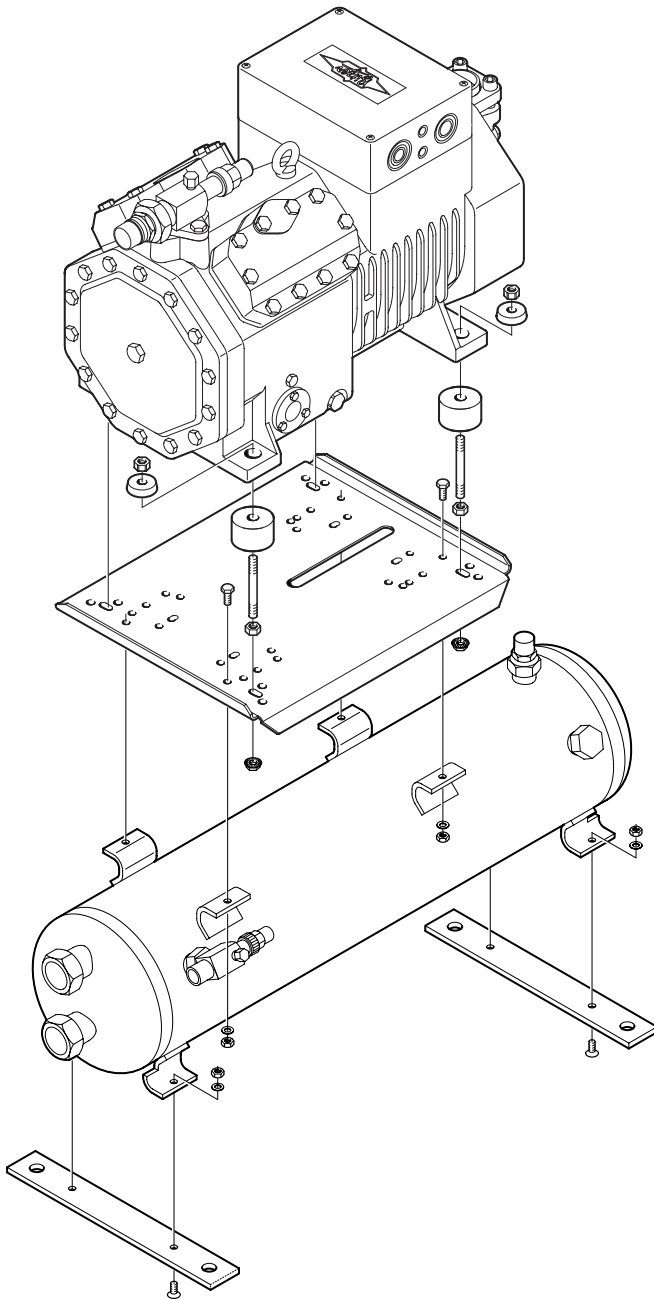


- PV1** K073H(B)
- PV2** F062H, F102H, K123H(B)
- PV3** F062H, K123H(B)
- PV4** F152H, K203H(B), K283H(B), K373H(B)
- PV5** F192T, F392T
- PV6** F202H, F252H, F302H, F402H, F552T, F1052T
K573H(B), K813H(B), K1053H(B), K1353T(B)
K1973T(B), K2923T(B)

320366-01

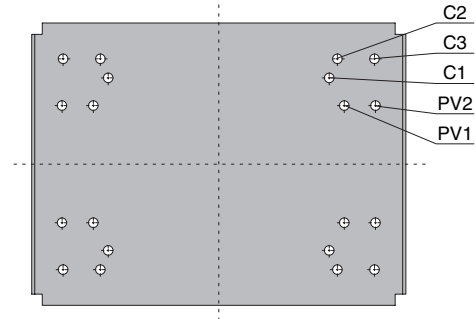

320366-02

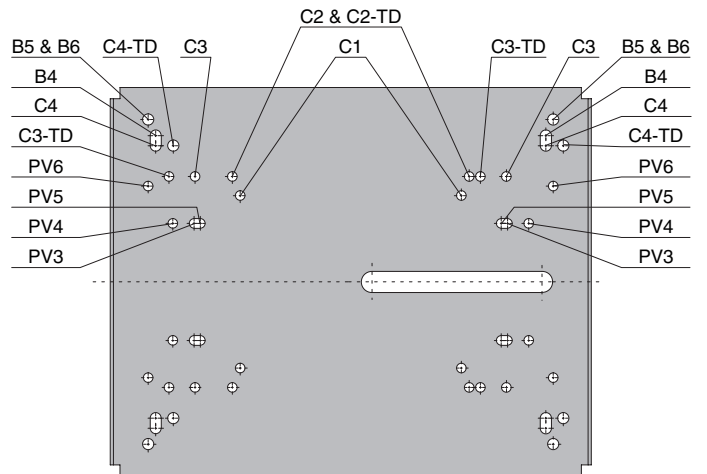

- C1** 2KC-05.2(Y) .. 2FC-3.2(Y)
- C2** 2EC-2.2(Y) .. 2CC-4.2(Y)
- C2-TD** 22EC-4.2(Y) .. 22CC-8.2(Y)
- C3** 4FC-3.2(Y) .. 4CC-9.2(Y)
- C3-TD** 44FC-6.2(Y) .. 44CC-18.2(Y)
- C4** 4VCS-6.2(Y) .. 4NCS-20.2(Y)
- C4-TD** 44VCS-12.2(Y) .. 44NCS-40.2(Y)
- B4** 4Z-5.2(Y) .. 4N-20.2(Y)
- B5** 4J-13.2(Y) .. 4G-30.2(Y)
- B5-TD** 44J-26.2(Y) .. 44G-60.2(Y)
- B6** 6J-22.2(Y) .. 6F-50.2(Y)
- B6-TD** 66J-44.2(Y) .. 66F-100.2(Y)